

Installation Instruction for Mobilizer-A0 and Mobilizer-FX01

1. Open the ECU and locate and identify the Immobilizer System.

Immo-A0 → use our Mobilizer-A0



Immo-FX01 → use our Mobilizer-FX01



2. Notice and remember the orientation of the Board. Desolder the stock Immobilizer board.



3. Install now our Mobilizer-Board. Take care about the orientation.

4. Only for Mobilizer-A0: If you want to use blank Keys or the red Key, you need to bypass the Immobilizer-Control-Unit, too. Locate the Immobilizer-Control-Unit under or near the Steering Column. Disconnect the 8pin Connector and connect Pins A3 to A8 the Harness. Keep the 8pin Connector disconnected.

